SKYPAD

# 7" Multimedia Tablet

# Quick Start Guide

## 1 - Introduction

Thank you for purchasing the new 7" SKYTEX SP712 Android 4.0 tablet with capacitive multi-touch display. It is designed to keep you entertained and engaged for hours at a time. With 4GB* of internal storage and MicroSD card slot for up to an additional 32GB, you can house a library of games, movies, music and eBooks. In addition, 5GB of free cloud storage is provided through the Cloudlink toolbox which includes other productivity Apps as well. View video files from your HDTV in high definition with HDMI®

When connected to the internet, download many of your favorite Android Apps from the Skytex App Store. The Apps are optimized specifically for your screen size bringing you the best experience possible. In addition, the 1Mobile Market offers hundreds of thousands of Apps including gaming, productivity, children's education and more.

Visit us as www.skytex.com/supportto register your product and receive additional information and updated FAQ's. It's recommended that you review the online user manual for more detained instruction about your Tablet.

*Approximately 1.5GB of internal storage is used for the OS, system files and pre-installed Apps.

## 2 - Device Cont rols and Ports

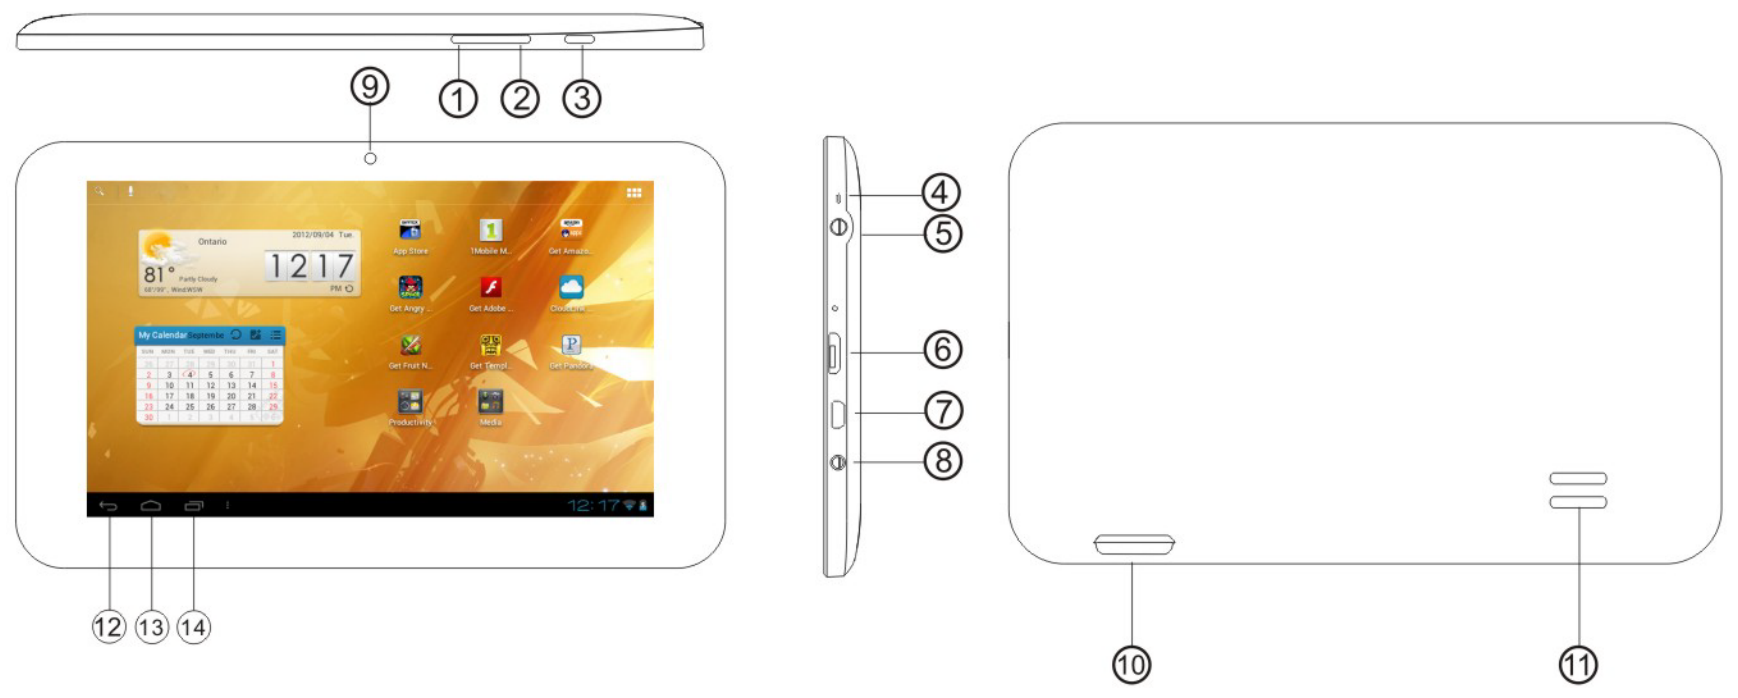
⑨
①
②
③
④
⑤
⑥
⑦
⑧
⑩
⑪
⑫
⑬
⑭

1. Volume –
2. Volume +
3. Power
4. Microphone
5. 3.5mm Audio Jack
6. Mini-HDMI 1.4 port
7. Mini-USB OTG port
8. DC IN
9. Webcam
10. Micro SD card reader
11. Speaker
12. Back Key
13. Home Key
14. Open Apps Key

## 3 - Charging Your Device

Connect the AC adapter to your Tablet via the DC input on the bottom (illustrated below).
The Tablet may also be charged via USB by connecting your Tablet to a PC with the included USB cable.

It is recommended that the Tablet be fully charged before the first use. A full charge and discharge (15% or below) cycle is recommended to maximize the battery's life and performance.

If the battery is completely drained please allow the Tablet at least 10-25 minutes to recharge prior to turning it on.

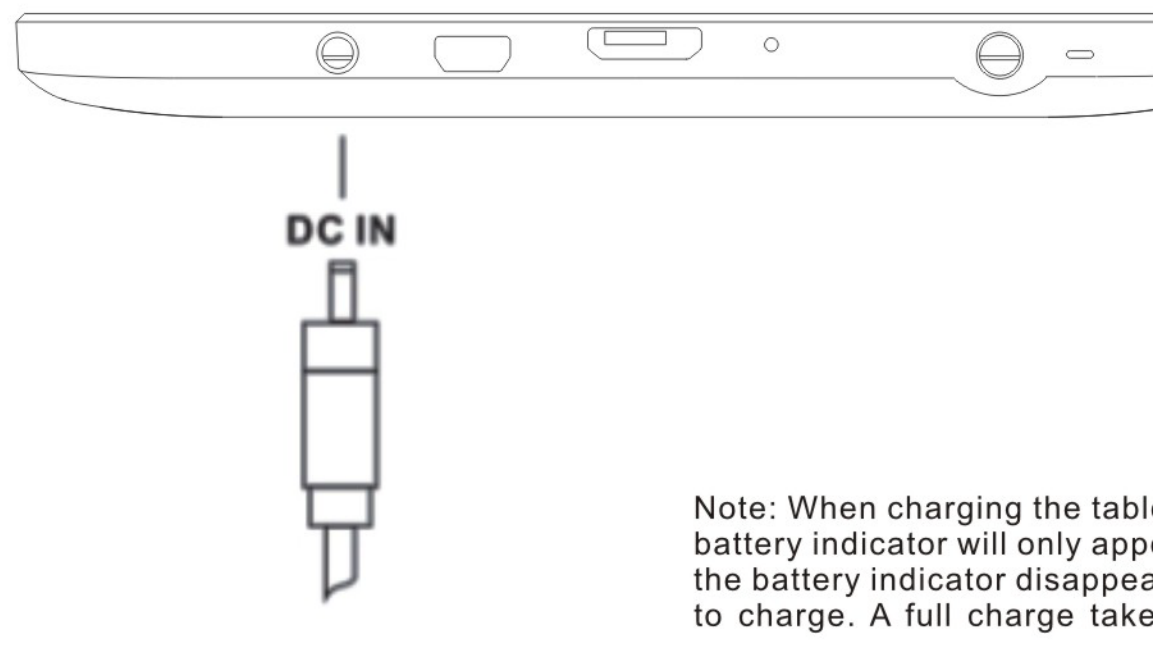

Note: When charging the tablet while powered OFF, the battery indicator will only appear momentarily. Although the battery indicator disappears, the tablet will continue to charge. A full charge takes approximately 3 hours.

## 4 - Turn Device ON/OFF/Standby Mode

**ON**: Press and hold the Power button until the loading screen appears. Once the lock screen appears, unlock the Tablet by swiping your finger from the left 'Unlock' icon to the right 'Unlock' icon (illustrated below). Should the display 'Timeout' (or go black) before you are able to unlock the device, press the Power button for one second to turn the display back on.

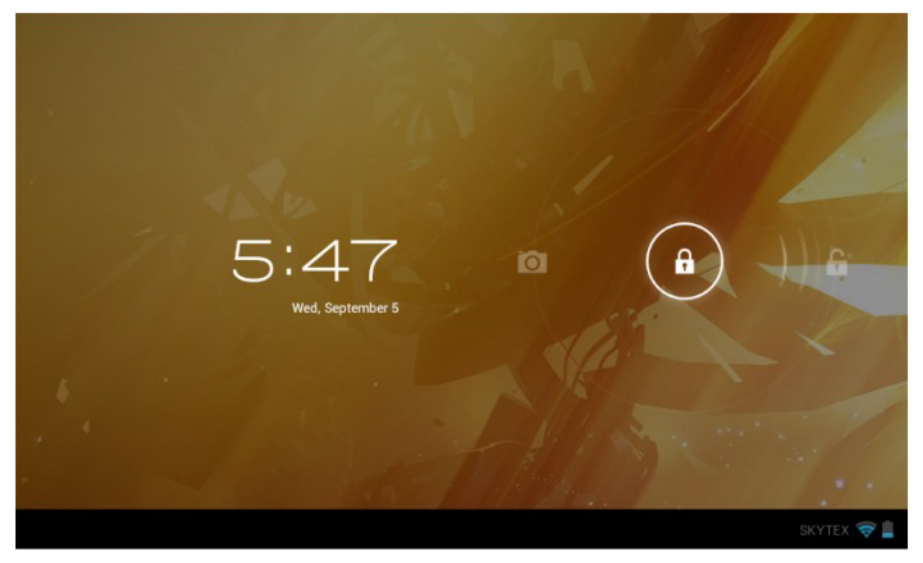
5:47
Wed, September 5
SKYTEX

**OFF**:Press and hold the Power button until the Tablet options appear. The options will prompt you to tap 'OK' to power the Tablet off or 'Cancel' to return back to the Home screen.

**STANDBY**:To enter Standby mode, simple tap and release the Power button. To wake up from Standby, tap and release the Power button.

NOTE: Leaving the device in Standby mode when not in use will result in a small battery drain. Switch the Tablet off completely to conserve power between charges.

## 5 - Connecting to a Wireless Network

**Note**: To connect your Tablet to the Internet, you must have an Internet connection and a wireless network.

A.Open the App Tray ▦ > Select 'Settings' > Switch the 'Wi-Fi' option from 'OFF' to 'ON' by tapping the 'OFF' icon.
B.A list of networks will appear to the right of the screen > Select your network and enter the password/network key.
C.Tap 'Connect' to complete the connection.

Tip: Check the "Show Password" box to verify password was entered correctly.

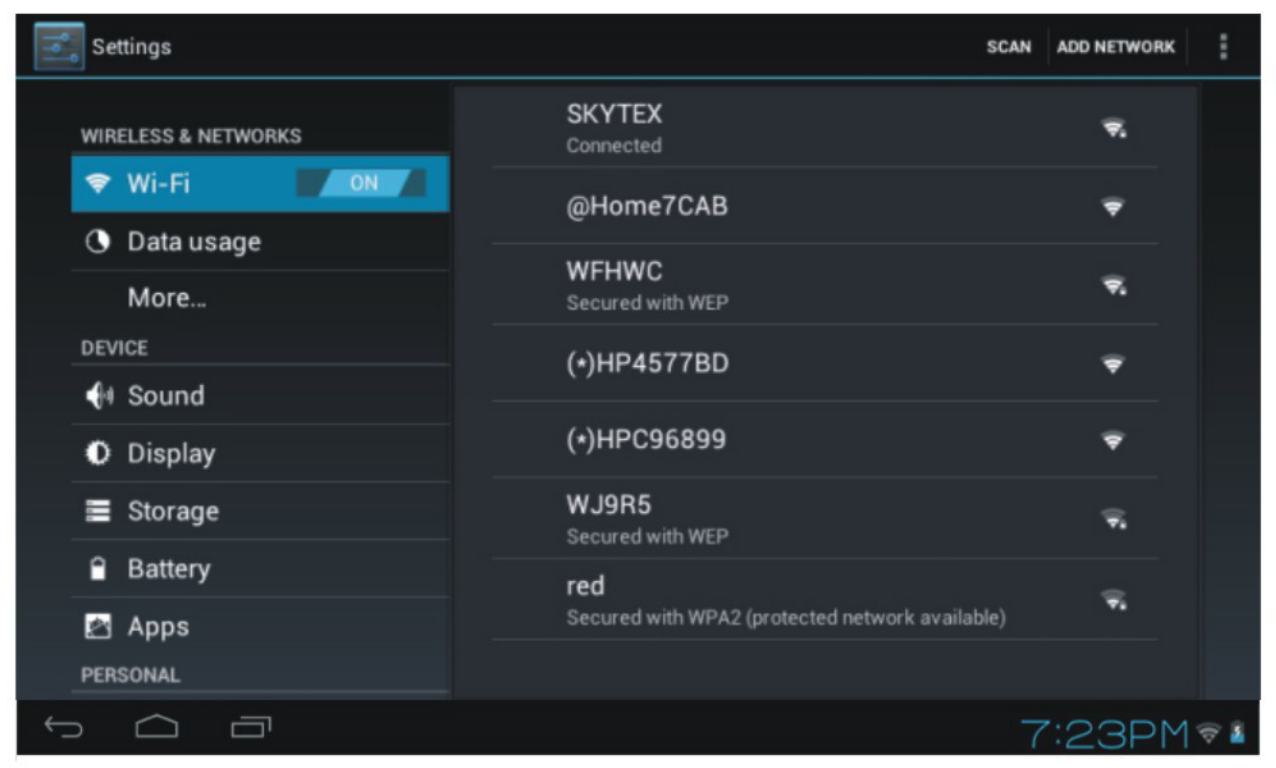
Settings
SCAN
ADD NETWORK
WIRELESS & NETWORKS
Wi-Fi
ON
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
7:23PM

SKYTEX
Connected
@Home7CAB
WFHWC
Secured with WEP
(•)HP4577BD
(•)HPC96899
WJ9R5
Secured with WEP
red
Secured with WPA2 (protected network available)

## 6 - Install Apps from Skytex App Store and 1Mobile Market

A.Tap the SKYTEX or 1 to browse by category or Search for popular apps to download on to your Tablet. Select the desired App and download it. (You must be connected to the internet)

B.NOTE: Once your download has completed you will be prompted to install the app. Tap 'Install' and when completed the app will appear in the App Tray.

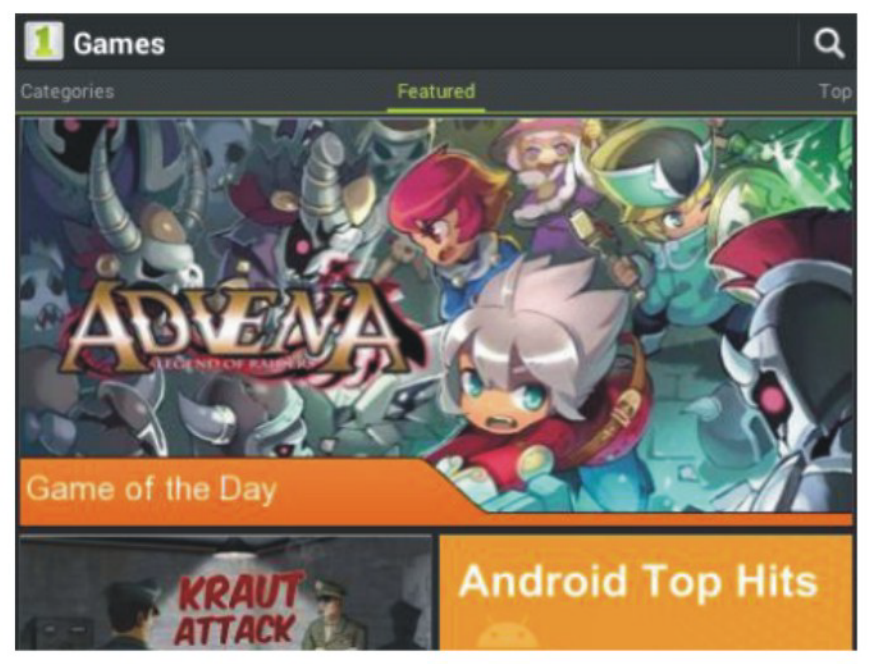
Games
Categories
Featured
Top
ADVENA
Game of the Day
KRAUT ATTACK
Android Top Hits

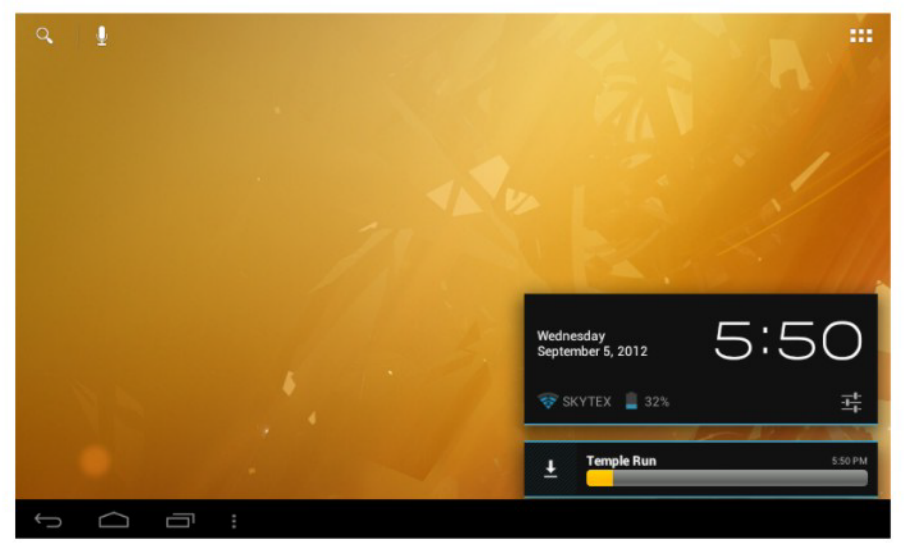
Wednesday
September 5, 2012
5:50
SKYTEX
32%
Temple Run

Note: Google Play is not supported at this time.

SKYTEX The Skytex App Store is stocked with the most popular Apps that have been optimized specifically for the screen size on your Tablet. Browse the best and most popular Apps. New Apps are released weekly.

1 Find over 200,000 apps at 1Mobile including online shopping apps, streaming video apps, games, social media, radio, news, recipes, and more.

## 7 - Browse the Web

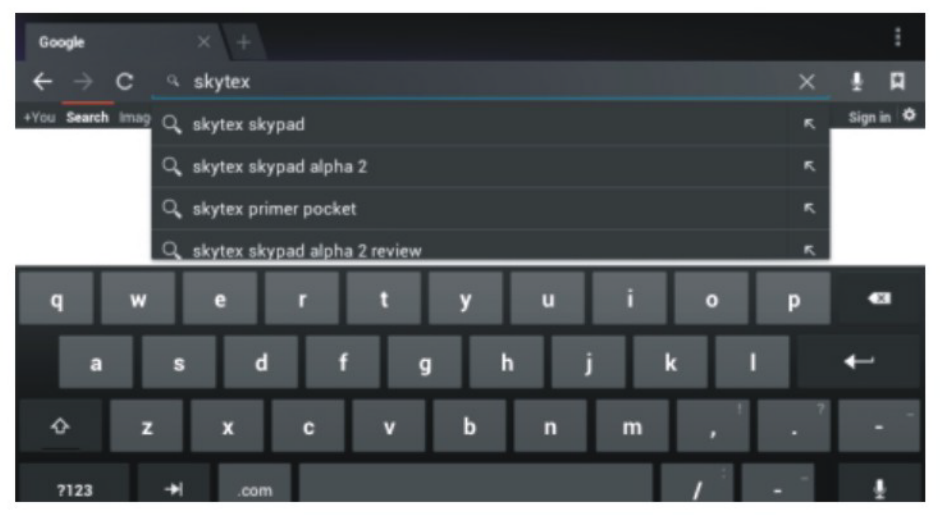
Google
skytex
skytex skypad
skytex skypad alpha 2
skytex primer pocket
skytex skypad alpha 2 review

Your SKYPAD Tablet is equipped with a full HTML Web Browser that enables you to view webpages.

A.To access the Web Browser select the icon from the App Tray.
B.To enter a URL, tap the URL field at the top of the browser and enter the desired link using the QWERTY keyboard.
C.Tap 'Go' to load the page.

Bookmark a Favorite Page
A.Scroll to the top of the desired webpage.
B.Tap the star on the URL field ☆ > Tap 'OK.'

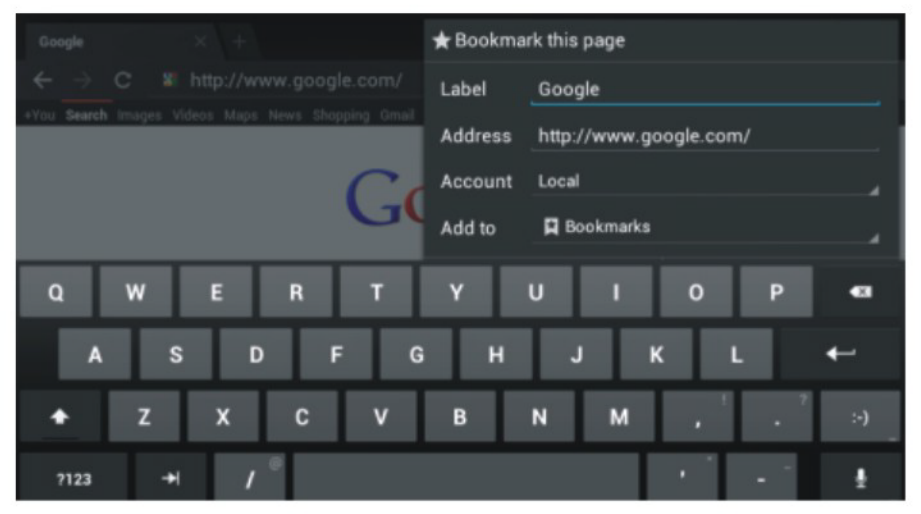
Bookmark this page

Label: Google
Address: http://www.google.com/
Account: Local
Add to: Bookmarks

## 8 - Settings: Date, Time, & Screen Timeout

**Manual Time Setting**
A.Open the App Tray ▦ > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Set Time' > Set the hour and minute by tapping the arrow keys; then tap 'Set.'

**Manual Date Setting**
A.Open the App Tray ▦ > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Set Date' > Set the month, date, and year by tapping the arrow keys; then select 'Set.'

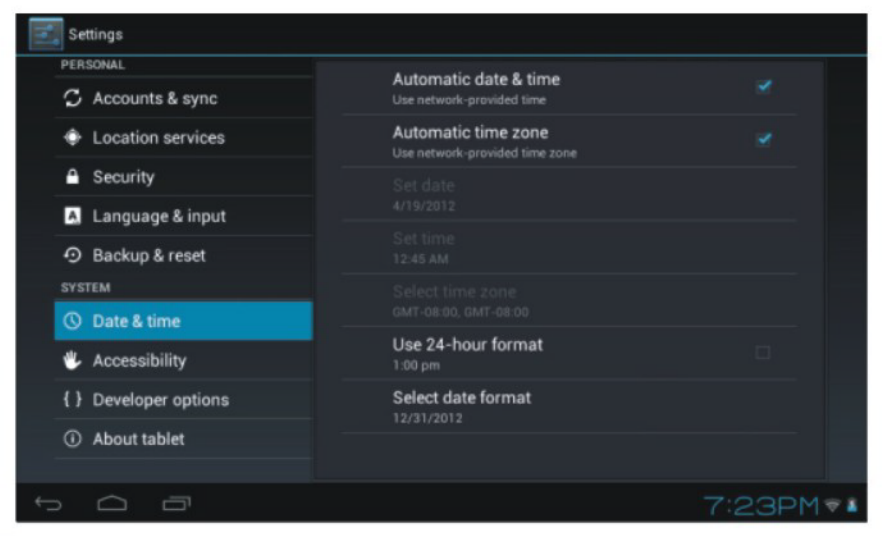
Settings
PERSONAL
Accounts & sync
Location services
Security
Language & input
Backup & reset
SYSTEM
Date & time
Accessibility
Developer options
About tablet
7:23PM

Automatic date & time ☑ Use network-provided time
Automatic time zone ☑ Use network-provided time zone
Set date 4/19/2012
Set time 12:45 AM
Select time zone GMT-08:00, GMT-08:00
Use 24-hour format 1:00 pm ☐
Select date format 12/31/2012

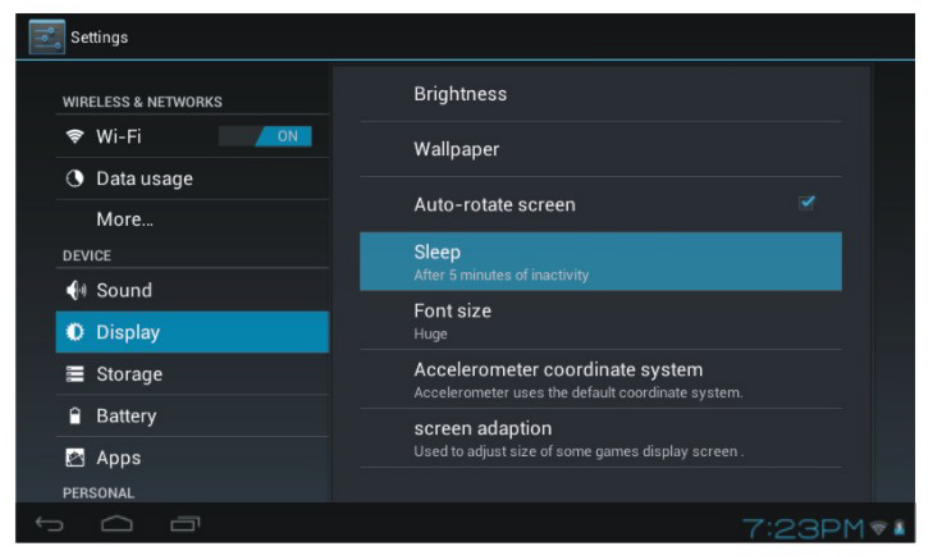
Settings
WIRELESS & NETWORKS
Wi-Fi
ON
Data usage
More...
DEVICE
Sound
Display
Storage
Battery
Apps
PERSONAL
7:23PM

Brightness
Wallpaper
Auto-rotate screen ☑
Sleep: After 5 minutes of inactivity
Font size: Huge
Accelerometer coordinate system: Accelerometer uses the default coordinate system.
screen adaption: Used to adjust size of some games display screen .

**Auto Date & Time**
A. Open the App Tray ▦ > Select 'Settings' > Scroll down to and tap 'Date & Time' > Select 'Automatic Date & Time' to check the box.

**Note**: The 'Automatic Date & Time' option sets the date and time using the network provided. Should an incorrect time zone appear, tap 'Select Time Zone' and find the appropriate time zone.

**Screen Timeout**
A.Open the App Tray ▦ > Select 'Settings' > 'Display' > 'Sleep.'
B.A dialogue box will appear with several options to choose from.
Tap the length of time (in seconds or minutes) before the Tablet goes black (to conserve battery life).

## 9 - Home Screen, Application Shortcuts

**Home Screen**
A.This is your starting point.The Home screen features pre-installed games, shortcuts and many popular App links ready for download once you connect to the internet.
B.Status/Notifications Bar, Quick Search Icon, and Shortcut Icons.


Back
Home
Open Apps
App Tray

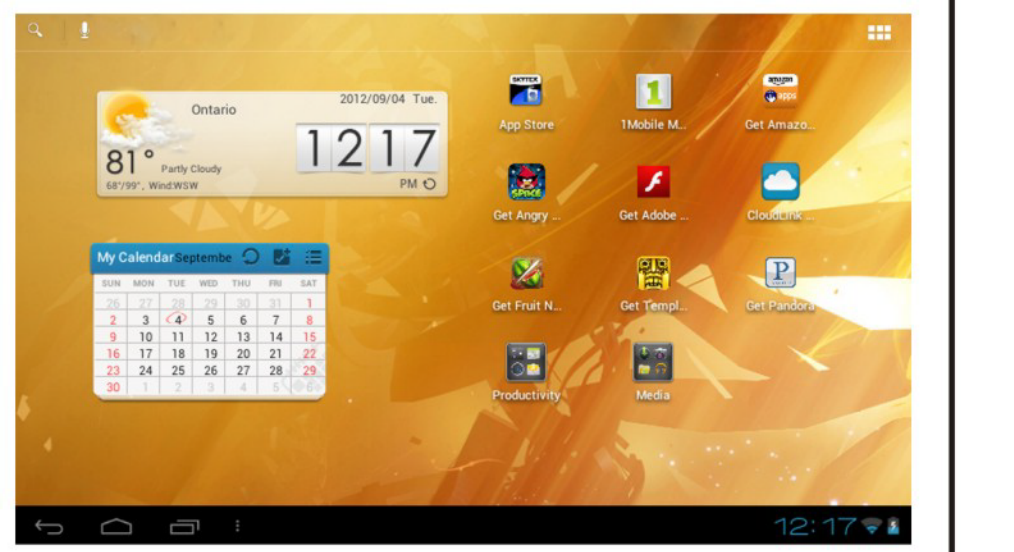
Ontario
2012/09/04 Tue.
81°
12 17
My Calendar
App Store
1Mobile M...
Get Amazo...
Get Angry ...
Get Adobe ...
CloudLink ...
Get Fruit N...
Get Templ...
Get Pandora
Productivity
Media
12:17

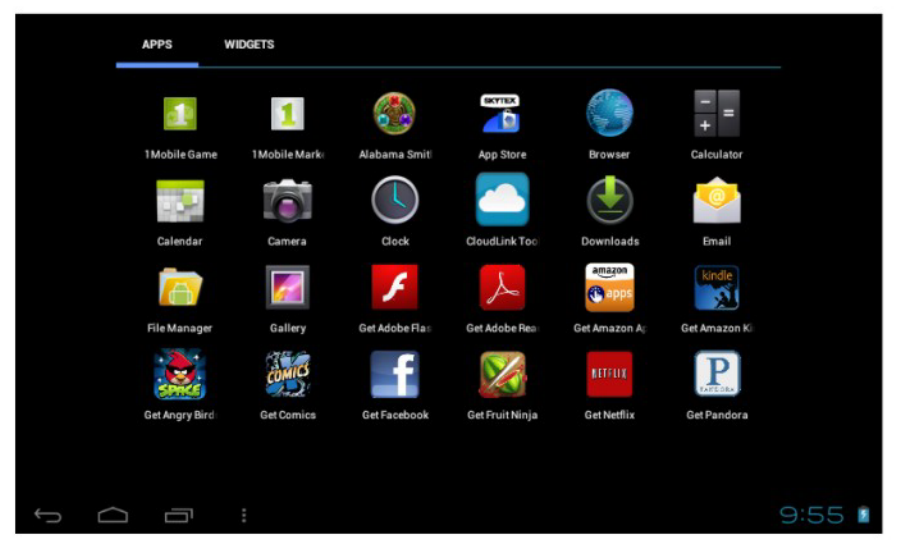
APPS
WIDGETS
1Mobile Game
1Mobile Mark
Alabama Smit
App Store
Browser
Calculator
Calendar
Camera
Clock
CloudLink Too
Downloads
Email
File Manager
Gallery
Get Adobe Fla
Get Adobe Rea
Get Amazon A
Get Amazon Ki
Get Angry Bird
Get Comics
Get Facebook
Get Fruit Ninja
Get Netflix
Get Pandora
9:55

**Add or Remove Favorite Apps from App Tray**
A.To open the App Tray tap the ▦ icon located at the upper right hand corner of the Tablet to display all of the applications that have been pre-installed or downloaded to your Tablet.
B.To add to the Home Screen, tap and hold the desired app. Release the icon onto the Home screen.
C.To remove an app from the Home screen, tap and hold the icon until it enlarges, then drag to the 'Remove' option that appears at the top of the screen.

**Note**: Apps that are running in the background may take up valuable memory and drain battery resources. Tap the ▭ icon and swipe to close the apps.

## 10 - Transfer Your Music/Photos/Videos

A.Connect your Tablet to your PC via the USB cable.
B.A USB symbol will appear in the Notifications Bar/Bottom Bar.
C.Select the USB icon that appears in the Notifications Bar/Bottom Bar.
D.Tap 'USB Connected' > 'Turn on USB Storage.'

Drag-and-drop your music, video, and photo files between your Tablet and PC.

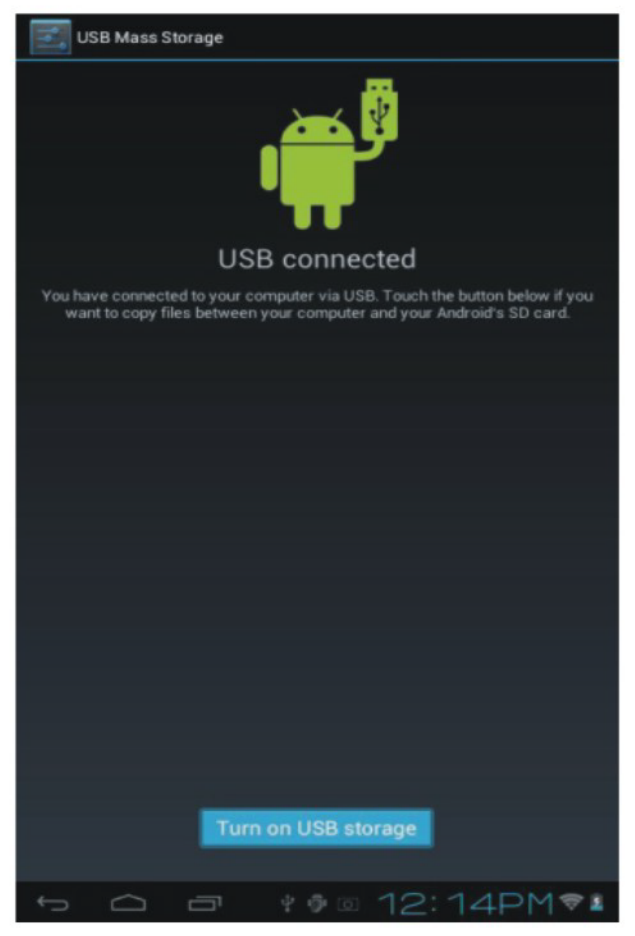
USB Mass Storage
USB connected
Turn on USB storage
12:14PM

You have connected to your computer via USB. Touch the button below if you want to copy files between your computer and your Android's SD card.

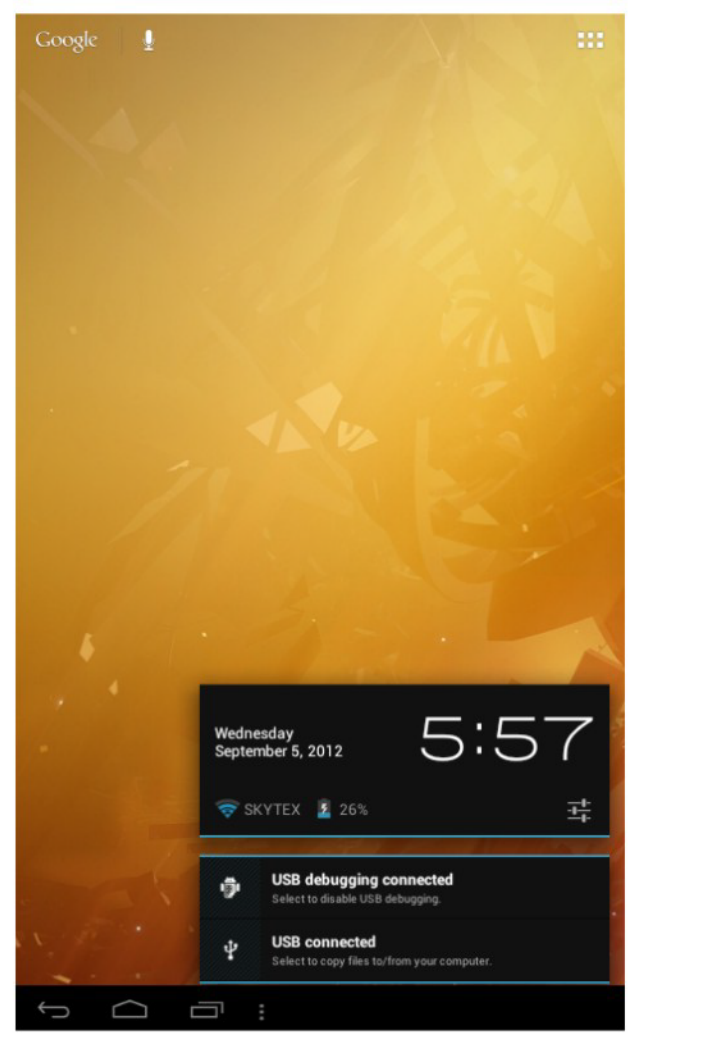
Google
Wednesday
September 5, 2012
5:57
SKYTEX
26%

USB debugging connected: Select to disable USB debugging.
USB connected: Select to copy files to/from your computer.

Note: Your Tablet will be recognized as an external drive. Once completed, tap 'Turn off USB Storage' and remove Tablet from your PC.

## 11- Playing Your Music/Videos/Photos

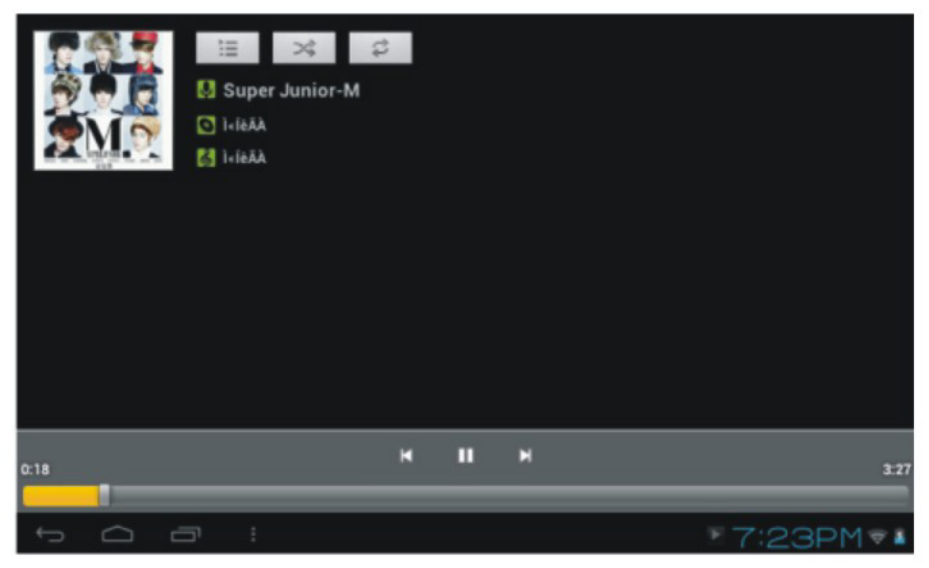
Super Junior-M
0:18
3:27
7:23PM

**Play Music**
A.Go to App Tray then tap the 'Music' 🎧 app.
B.Select the desired song and adjust volume settings to your liking.
C.To exit out of the app, tap 'Home or 'Back.'
D.To stop music playback, go back to the Music app and tap 'Pause.'

Watch Videos
A. Go to the App Tray and select 'Super-HD Player'
B. Select the movie file to view.
C. Once the video begins, you may select playback controls that appear on the display.

View Photos
A. Go to App Tray and select 'Super-HD Player'
B. Tap on photo files you would like to view.

7:23 PM
Battery:43%
00:08
07:33
7:23PM

## 12 - Online Video Streaming

Your Tablet is capable of streaming videos directly from the Internet or via 3rd party streaming applications. To properly run certain applications Adobe® Flash® Player may be required. Popular streaming video applications are available through the Skytex App Store for download onto your Tablet. Prior to streaming films, download the application of your choice.

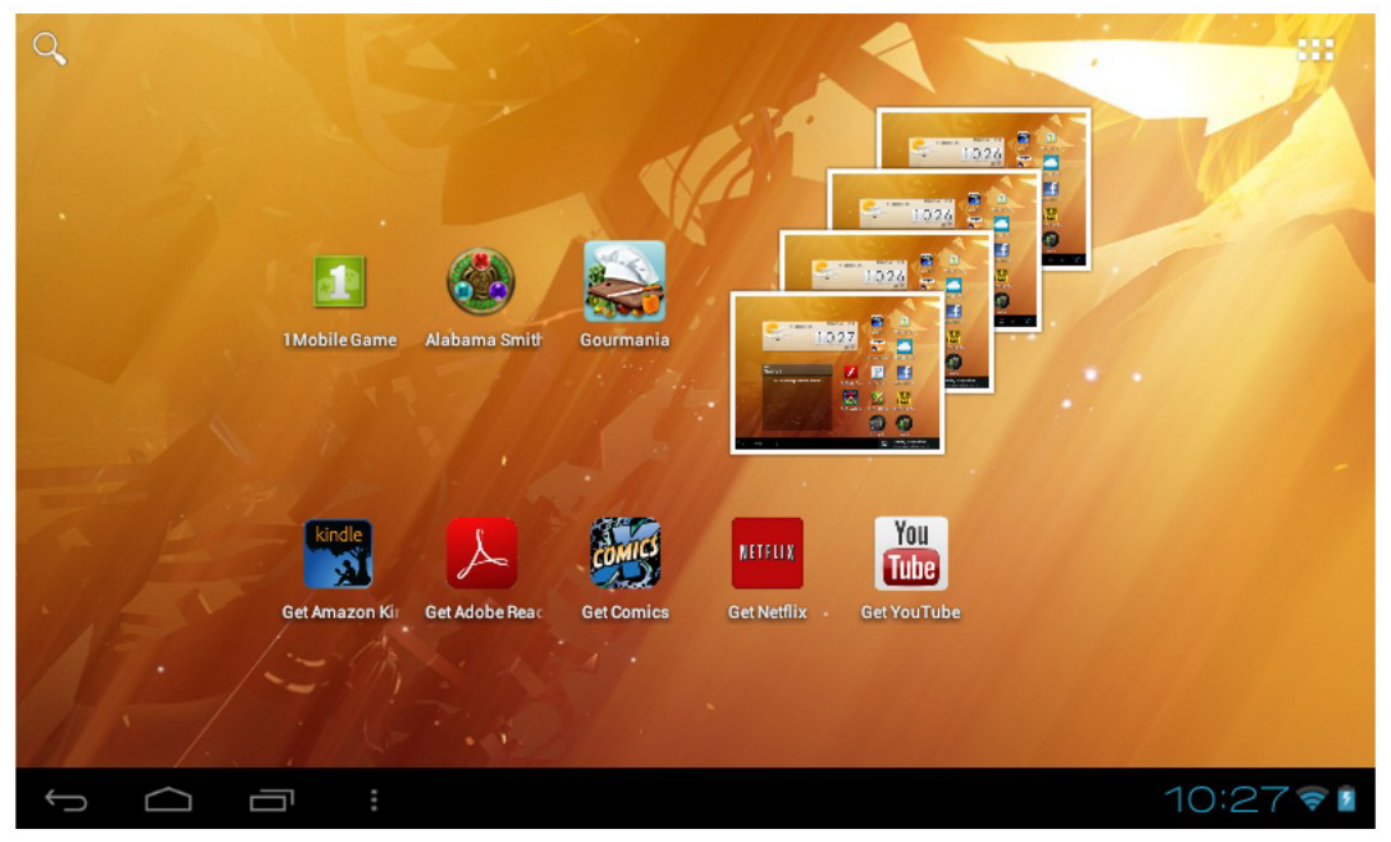
1Mobile Game
Alabama Smith
Gourmania
Get Amazon Ki
Get Adobe Reac
Get Comics
Get Netflix
Get YouTube
10:27

Note: To view video on your HDTV or monitor, connect using an optional HDMI cable and select the appropriate TV input.

## 13 - Webcam and Video Chat

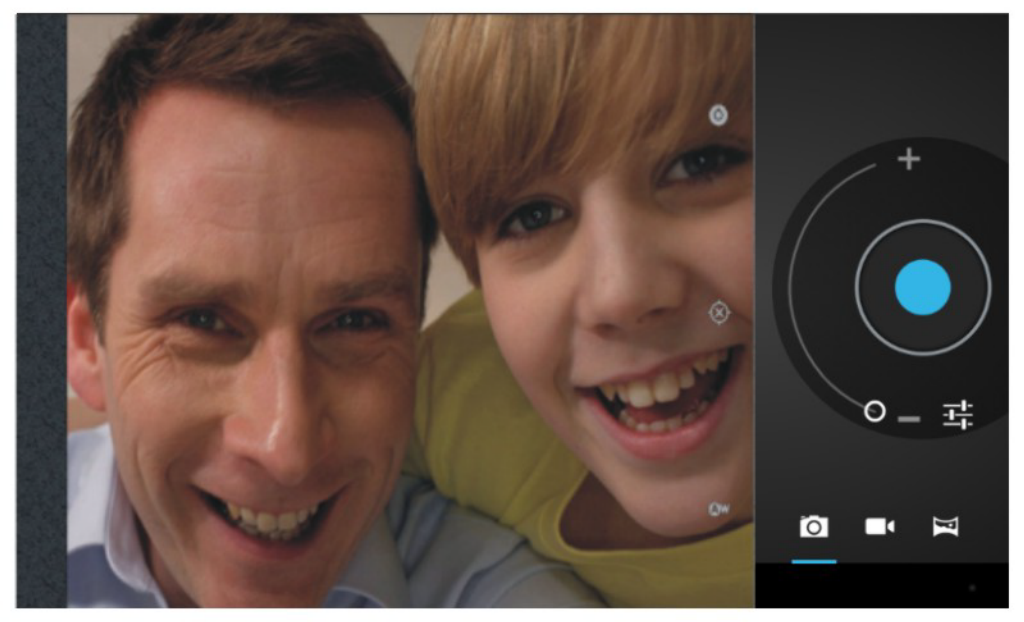

**Camera Use**
A.Open the 'Camera' application by tapping the Webcam icon
B.Capture images shown on the display by tapping the aperture button
C.Tap the thumbnail of an image that appears to view or edit the photo.

**Note**: You may also view your photos with the 'Super-HD Player' app

**Camera Functions**
A.Tap the Trash Can icon to delete.
B.Tap Menu > 'Set Picture As' to set the photo as the Table's background.

**Video Chat**
A.Download and install your favorite video chat app from the 1Mobile Market.
B.The Webcam is set as the default camera for video chat.

## 14 - Setting up Your Email

A.From your App Tray, tap the 'Email' icon to enter the Email client.
B.Enter an email address and a password.
C.After you have entered your information, press 'Next' to move to the next step.
D.The email app will test the incoming and outgoing mail servers. Once completed, you will be prompted to enter an account name and your name.
E.The account name is used to identify the name of the account on the Tablet.
F.Your name will be displayed on all outgoing messages sent from the email app on your Tablet.

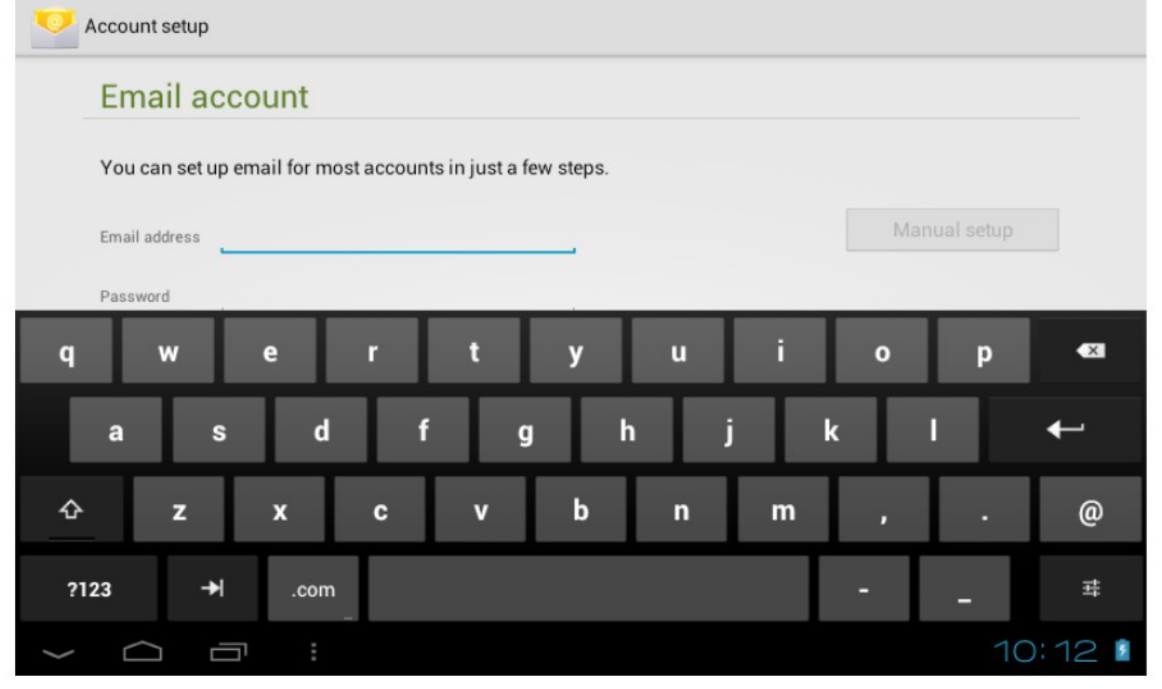
Account setup
Email account
Email address
Password
Manual setup
10:12

You can set up email for most accounts in just a few steps.

Certain email providers will require you to enter more details about the type of account you are using. You will have three choices: POP3, IMAP, and Exchange. If unsure of your account type, please contact your email provider for more information

## 15 - FAQ's

**•How do I reset my Tablet?**
–If your Tablet won't turn on try resetting the device. To reset, first make sure the power source is unplugged. Press and hold the Power button for 10 seconds and then plug the power source back in. Press the Power button for another 2-3 seconds.
–To erase all data on the Tablet go to Settings > Backup & reset > Factory Data Reset.

**•Where can I download Android Apps from?**
–We've pre-installed the Skytex App Store and 1Mobile Market, giving you immediate access to well over 200,000 of the best Android apps available. Additionally, there are several 3rd party Android App stores that offer free and paid Apps that you'll find at the Skytex App Store for download. Google Play is not officially supported at this time.

**• Why am I unable to connect to my Wi-Fi Network?**
–Make sure that the correct password is entered when connecting to your wireless network. To ensure a correct password is being entered enable the "Show Password" option and double check for a case sensitive password. If you are still having problems you may need to contact your Wireless provider.

**•Why do I get a parsing error when I attempt to download apps from the 1Mobile Market?**
–We recommend force closing the application and clearing the cache data. To do this go to Menu > Settings > Apps (select 1Mobile Market) > Clear Data
–If you continue to receive the parsing error, try downloading the application from the 1Mobile Market's website at www.1mobile.com.